

MOOER

@Wah

Digital Auto Wah Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V DC, ⊕ ⊖, center negative. Please do not use an AC adapter which supplies more than 9V DC. Unplug the AC power adapter when not in use or during electrical storms.

Connections

Always turn off the power and all other equipment before connecting or disconnecting. This will help prevent malfunction and damage to any of the devices. Make sure to unplug all connection cables and power cords before moving this unit. To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- *Direct sunlight
- *Heat sources
- *Magnetic fields
- *Extreme temperature or humidity
- *Excessively dusty or dirty location
- *High humidity or moisture
- *Strong vibration or shock

Interference with other electrical devices and Cleaning

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions. Clean only with a soft, dry cloth.

Handling

Do not apply excessive force to the switches or controls. Do not let paper, metal, or other objects into this unit. Take care not to drop the unit, and do not subject it to shock or excessive pressure.

FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Main Features

- 5 different Wah filter modes
- Two methods of operation : Auto (time based) and Touch (dynamic response)
- Versatile controls
- Full metal case

- Truebypass switching
- 9V power supply

Pedal layout

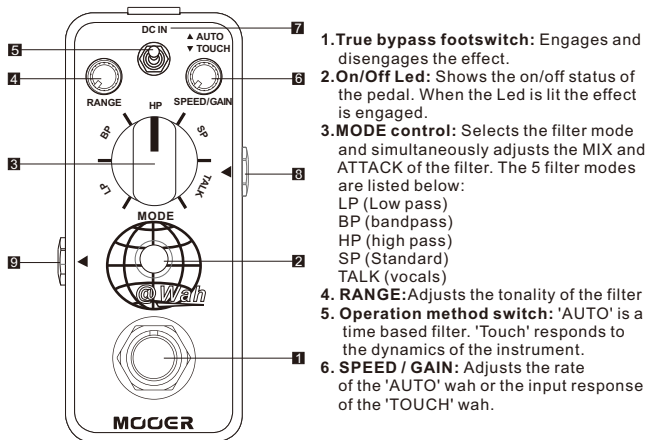

1. **True bypass footswitch:** Engages and disengages the effect.
2. **On/Off Led:** Shows the on/off status of the pedal. When the Led is lit the effect is engaged.
3. **MODE control:** Selects the filter mode and simultaneously adjusts the MIX and ATTACK of the filter. The 5 filter modes are listed below:
LP (Low pass)
BP (bandpass)
HP (high pass)
SP (Standard)
TALK (vocals)
4. **RANGE:** Adjusts the tonality of the filter
5. **Operation method switch:** 'AUTO' is a time based filter. 'Touch' responds to the dynamics of the instrument.
6. **SPEED / GAIN:** Adjusts the rate of the 'AUTO' wah or the input response of the 'TOUCH' wah.

7. **DC in power jack:** Input for power supply ⊕ ⊖, use a 9V DC regulated power supply.
8. **Input jack :** 1/4" audio jack for connecting to the input device or instrument.
9. **Output jack :** 1/4" audio jack, effect output for connection to amp or other devices.

Specification

Modes : 5 digital auto filters with 2 methods of operation.

Input : 1/4" mono audio jack. (Impedance: 470k Ohms)

Output : 1/4" mono audio jack (Impedance: 100 Ohms)

Power requirements: AC adapter 9V DC ⊕ ⊖, center negative. Highly recommend to use Moer Micro Power.

Current Draw: 120mA

Dimensions : 93.5mm(D) x 42mm(W) x 52mm(H)

Weight : 140g

Accessories : Owner's Manual

**Notes : Any specification's update will not be amended in this manual.*

注意事项

使用前请仔细阅读

电源供应

请使用正确的交流电源插座连接电源变压器。

请使用内负外正 \oplus - \ominus 的9V ($\pm 10\%$) 电源变压器, 最大工作电压不得超过12V, 否则将会导致设备损坏, 着火或者其他问题。不使用时或雷雨天时请拔下电源。

连接

连接设备或断开连接前, 请务必关闭电源及其他设备, 这将有助于避免故障和损害其他设备。另外, 要确保移动本机前断开所有的连接线和电源线。

放置场所

为防止变形、变色, 及其他严重损坏, 请避免以下情况:

- 阳光直射
- 靠近热源
- 磁场
- 高温潮湿
- 多尘或不洁的地方
- 湿度较大
- 强烈震动或摇晃

电器干扰

在使用本机时, 收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

清洁

请使用干燥柔软的布清洁本机。如有必要, 可用稍微湿润的布拭擦。切勿使用粗糙的清洁粉、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

操作

请勿暴力使用开关及控制元件。


请勿让纸屑、金属制品及其他物体落入机内。

注意不要掉落, 不要使其受到冲击及过度压力。

性能概述

- 两种模式选择: Auto模式和Touch模式
- 每种Wah提供五种不同的音色模式选择, 囊括了从Low pass Auto wah到Talk Touch Wah等共10种Wah音色
- 提供Range, Speed\Gain, Mode三个旋钮控制参数调节以及两档开关切换模式
- 全金属MINI外壳
- 纯直通脚踏开关
- 9V电源供电 \oplus - \ominus

面板说明

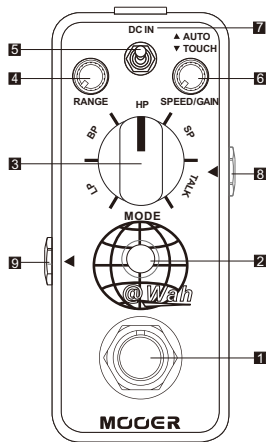

- 1.TRUE BYPASS 纯直通踩钉确保音色无损传输。
- 2.LED提示效果器工作状态。
- 3.MODE旋钮在Auto和Touch模式下可以选择5种不同的音色模式, 同时在对应的区域可调节一定的MIX和ATTACK:
LP(低通):AUTO模式lowpass wah
TOUCH模式lowpass wah
BP(带通):AUTO模式bandpass wah
TOUCH模式bandpass wah
HP(高通):AUTO模式highpass wah
TOUCH模式high wah
SP(标准):AUTO模式standard wah
TOUCH模式standard wah
TALK(人声):AUTO模式talk wah
TOUCH模式talk wah
- 4.RANGE旋钮 调节Wah音的范围。
- 5.两档拨档Auto模式和Touch模式。
- 6.SPEED/GAIN旋钮调节Wah速度和根据不同。输入调节增益大小。
- 7.DC9V使用9V直流变压器(内负外正 \oplus - \ominus)。
- 8.INPUT输入: 1/4" 单声道音频接口, 连接输入信号。
- 9.OUTPUT输出: 1/4" 单声道音频接口, 连接输出信号。

操作说明

1. 连接电源 (9V, 内正外负, \oplus - \ominus)
2. 连接吉他信号输入至@Wah的INPUT接口, OUTPUT接口连接至音箱输入接口
3. 踩下踩钉开启效果器, 通过提供的旋钮调节对应参数获得需要的效果音色

技术参数

工作模式: 10种Wah音色可选

输入: 1/4" 单声道音频接口 (阻抗470k Ohms)

输出: 1/4" 单声道音频接口 (阻抗100 Ohms)

电源供给: 9V直流变压器 (内负外正), 推荐使用Mooer Micro Power

工作电流: 120mA

尺寸: 93.5mm(D) x 42mm(W) x 52mm(H)

重量: 140g

附件: 用户手册

*免责声明: 参数更新恕不另行通知